

GENERAL NOTES


- -BALLASTING SHALL BE ACHIEVED BY THE SAND BAG, TIRE-SIDEWALL BALLAST, OR PREFORMED WEIGHTED BASE BALLASTING METHODS. DO NOT PLACE BALLAST ON TOP OF THE DRUM, NOR AS TO PRESENT A HAZARD WHEN STRUCK.
- -IF NECESSARY PLACE THE NAME OF THE AGENCY, CONTRACTOR, OR SUPPLIER ON NON-RETROREFLECTIVE DRUM SURFACES. SHOW THE LETTERS AND NUMBERS USING A NON-RETROREFLECTIVE COLOR AND NOT OVER 2" IN HEIGHT.

FOR DRAWING STANDARD DRUMS

U-4010

TCP-13

SHEET 1 OF 1 1130D01

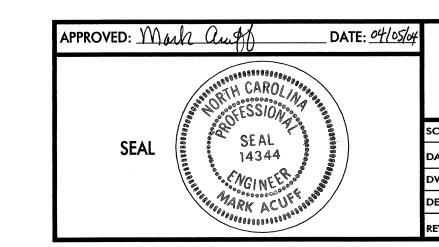

REPLACEMENT DETAIL FOR RSD DRAWING 1130.01

SCALE: NONE

DATE:

DWG. BY:

DESIGN BY:

REVISIONS

OF TRIMERS

OF TRIMERS

CADD

JYUU, UNSEALEDY-LAM Y 09:32:46 AM